

# User's Manual

Dear Valued Customer:

Thank you for purchasing gas room heater from us. We believe it is the best heating system in similar types.

This instruction manual has been carefully prepared to ensure you will be able to easily operate, learn more about it and fully realize all its inherent capabilities.

We invite your comments as well as any issues you may have regarding this manual or our products. Once again, let us welcome you to be the growing family of our company. We look forward to working with you in the future.

Any innovation or mini changes without further notice.

## Technical Data

**Model No.:** PO-E01  PO-E02  PO-E03   
PO-E04  PO-E05

Gas Heat Input 4100 W

Gas category: LPG

(Propane - Butane)

Gas pressure: (28-30) mbar.

Pin Code: 598 CL 250



Electric Power: 1250w

220 V ~240V- 50 Hz

## Operating Instructions:

There are 3 controls need to be paid attention .

The first is the valve on the cylinder, which will be used to turn **ON** and **OFF** the gas supply.

The second is the gas control knob with a dial which has 3 **positions** marked on it. This control knob is located on the top end of the heater (**fig 4**).

The third is the piezoelectric ignition button next to the gas control knob (**fig 4**). Pressing this button will generate a spark on the pilot burner thus igniting the gas to the pilot burner.

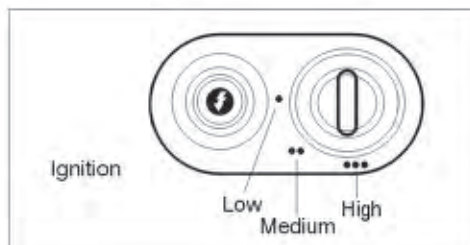


Fig4